

4.000 (101.6mm)

Fritschi Vipec Template


- Pin line is for reference.
Currently shows 10mm offset from front of Tecnica Zero G Pro Tour to tech pins on boot.

Adjust for your boot toe to tech pin offset by moving Boot Toe Line (*not* the pin line)

- Heel adjustment range is approx. 25mm.
Template is drawn to position heel in the middle of its travel range.

Adjust as necessary for multiple boot quiver with wide BSL range.

Printing Instructions:
Print full scale and verify by measuring 4" x 4" box around this text.

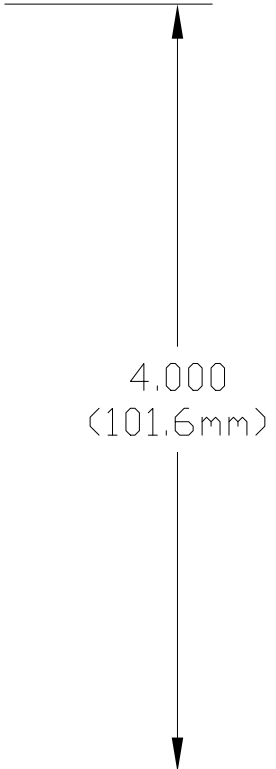

Note: Powderguide & Wildsnow templates are WRONG.

Toe holes:
 Front holes: 44mm wide
 Rear holes: 40mm wide
 Front to back spacing: 65.75mm
 (changed from 65mm)

Heel Holes: 28 (front & rear holes)
 Front to back spacing: 60.5mm
 (changed from 60 mm)

02/09/2020: Mounted 182 Veneer GPOs & verified the following changes:

- Change Tech Pin offset to front of toe to 10mm for Tecnica Zero G.
- Change heel offset to center heel in its 25mm adjustment range.

